

INSTALLATION INSTRUCTION

Place the M sleeve
on the PVC pipe and paste with
proper glue; we suggest Tangit
type glue for reference.

Check pipe hole!
Verify the hole in the pipe
Ø 31.5-32.0mm

1



Plug the M sleeve
with the UN cover to protect the
female thread during the
concrete casting

Check the assembly!
Make sure the sleeve is perfectly
fixed and aligned to the pipe,
leveled with the other sleeves

2



Make the concrete casting
Of the complete floor when all
the sleeves are placed on piping
system

Check the sleeves!
Make sure the sleeves are
aligned to the floor, leveled with
the other sleeves

3



**NOZZLE + SLEEVE
INSTALLATION
FOR CONCRETE
FLOOR**

**P NOZZLE
M SLEEVE
ACCESSORIES**

Remove UN protective cover only before nozzles installation

INSTALLATION INSTRUCTION

Place the Nozzles!
Screw the nozzles into the sleeves; all the nozzles must be leveled on the floor.

Remember the Gasket!
The soft gasket can be installed to increase the sealing of the Nozzle on the floor

4



Tight the Nozzles!

Torque set 5-8 Nm
Max screw speed 400rpm

Check the assembly!
The Nozzle should not move and join perfectly to the sleeve and the floor

5



**NOZZLE + SLEEVE
INSTALLATION
FOR CONCRETE
FLOOR**

**P NOZZLE
M SLEEVE
ACCESSORIES**



Check the floor!

All the nozzles must join perfectly to the floor and should be perfectly levelled in the whole floor. If any level adjustment is necessary you can use the OR rigid washer in different thickness to compensate any deviation

ISTRUZIONI DI INSTALLAZIONE

Posiziona il manicotto M sul tubo in PVC ed incollalo con il collante adeguato; noi suggeriamo colla tipo Tangit.

Verifica il foro del tubo!
Controlla il foro nel tubo
Ø31.5-32.0mm

1



Tappa il manicotto M con il tappo UN per proteggere il filetto femmina durante la gettata di cemento

Controlla l'assemblaggio!
Assicurati che il manicotto si fissato correttamente, allineato al tubo e agli altri manicotti

2



Getta il cemento del piano quando tutti i manicotti sono correttamente inseriti sui tubi di distribuzione

Controlla i manicotti!
Assicurati che tutti siano allineati al piano, livellati rispetto a tutti gli altri manicotti

3



**INSTALLAZIONE
UGELLO E
MANICOTTO
SU PIANI IN
CEMENTO**

**UGELLO P
MANICOTTO M
ACCESSORI**

Rimuovi i tappi protettivi UN solo prima del montaggio ugelli

ISTRUZIONI DI INSTALLAZIONE

Installa gli ugelli!
Avvita gli ugelli nei manicotti;
tutti gli ugelli devono essere
livellati sul pavimento

Ricorda la guarnizione!
La guarnizione morbida può
essere installata per assicurare
la tenuta degli ugelli sul piano

4



Stringi gli ugelli!

Set dinamometro 5-8 Nm
Max avvitamento 200rpm

Controlla l'assemblaggio!
L'ugello non deve muoversi e
deve aderire perfettamente al
manicotto e al pavimento

5



INSTALLAZIONE UGELLO E MANICOTTO SU PIANI IN CEMENTO

UGELLO P MANICOTTO M ACCESSORI



Controlla il pavimento!

Tutti gli ugelli devono aderire perfettamente al piano e
devono essere adeguatamente livellati su tutto il filtro.
Se si rende necessaria una correzione puoi usare le
rondelle rigide OR di diverso spessore per compensare
ogni differenza di altezza.

INSTALLATION INSTRUCTION

Place the M sleeve
on the PVC pipe and paste with
proper glue; we suggest Tangit
type glue for reference.

Check pipe hole!
Verify the hole in the pipe
Ø 31.5-32.0mm

1



Plug the M sleeve
with the UN cover to protect the
female thread during the
concrete casting

Check the assembly!
Make sure the sleeve is perfectly
fixed and aligned to the pipe,
leveled with the other sleeves

2



Make the concrete casting
Of the complete floor when all
the sleeves are placed on piping
system

Check the sleeves!
Make sure the sleeves are
aligned to the floor, leveled with
the other sleeves

3



**NOZZLE + SLEEVE
INSTALLATION
FOR CONCRETE
FLOOR**

**T NOZZLE
M SLEEVE
ACCESSORIES**


Remove UN protective cover only before nozzles installation

INSTALLATION INSTRUCTION

Place the Nozzles!
Screw the nozzles into the sleeves; all the nozzles must be leveled on the floor.

Remember the Gasket!
The soft gasket can be installed to increase the sealing of the Nozzle on the floor

4

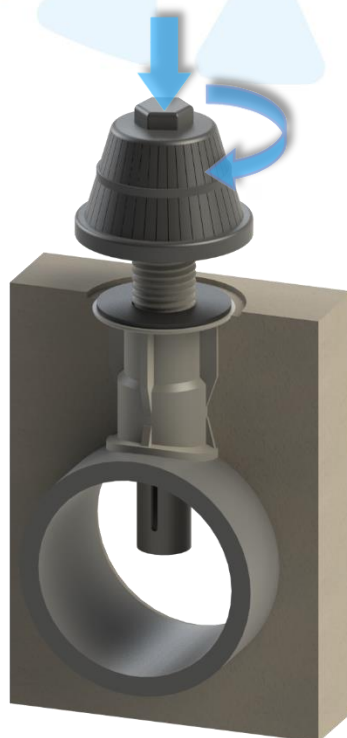

Tight the Nozzles!

Torque set 5-10Nm
Max screw speed 400rpm

Check the assembly!
The Nozzle should not move and join perfectly to the sleeve and the floor

5



**NOZZLE + SLEEVE
INSTALLATION
FOR CONCRETE
FLOOR**

**T NOZZLE
M SLEEVE
ACCESSORIES**



Check the floor!

All the nozzles must join perfectly to the floor and should be perfectly levelled in the whole floor. If any level adjustment is necessary you can use the OR rigid washer in different thickness to compensate any deviation

ISTRUZIONI DI INSTALLAZIONE

Posiziona il manicotto M sul tubo in PVC ed incollalo con il collante adeguato; noi suggeriamo colla tipo Tangit.

Verifica il foro del tubo!
Controlla il foro nel tubo
Ø31.5-32.0mm

1



Tappa il manicotto M con il tappo UN per proteggere il filetto femmina durante la gettata di cemento

Controlla l'assemblaggio!
Assicurati che il manicotto si fissato correttamente, allineato al tubo e agli altri manicotti

2



Getta il cemento del piano quando tutti i manicotti sono correttamente inseriti sui tubi di distribuzione

Controlla i manicotti!
Assicurati che tutti siano allineati al piano, livellati rispetto a tutti gli altri manicotti

3



**INSTALLAZIONE
UGELLO E
MANICOTTO
SU PIANI IN
CEMENTO**

**UGELLO T
MANICOTTO M
ACCESSORI**

Rimuovi i tappi protettivi UN solo prima del montaggio ugelli

ISTRUZIONI DI INSTALLAZIONE

Installa gli ugelli!
Avvita gli ugelli nei manicotti;
tutti gli ugelli devono essere
livellati sul pavimento

Ricorda la guarnizione!
La guarnizione morbida può
essere installata per assicurare
la tenuta degli ugelli sul piano

4



Stringi gli ugelli!

Set dinamometro 5-10Nm
Max avvitamento 200rpm

Controlla l'assemblaggio!
L'ugello non deve muoversi e
deve aderire perfettamente al
manicotto e al pavimento

5



INSTALLAZIONE UGELLO E MANICOTTO SU PIANI IN CEMENTO

UGELLO T MANICOTTO M ACCESSORI



Controlla il pavimento!

Tutti gli ugelli devono aderire perfettamente al piano e
devono essere adeguatamente livellati su tutto il filtro.
Se si rende necessaria una correzione puoi usare le
rondelle rigide OR di diverso spessore per compensare
ogni differenza di altezza.

INSTALLATION INSTRUCTION

Place the M sleeve
on the PVC pipe and paste with
proper glue; we suggest Tangit
type glue for reference.

Check pipe hole!
Verify the hole in the pipe
Ø 31.5-32.0mm

1



Plug the M sleeve
with the UN cover to protect the
female thread during the
concrete casting

Check the assembly!
Make sure the sleeve is perfectly
fixed and aligned to the pipe,
leveled with the other sleeves

2



Make the concrete casting
Of the complete floor when all
the sleeves are placed on piping
system

Check the sleeves!
Make sure the sleeves are
aligned to the floor, leveled with
the other sleeves

3



**NOZZLE + SLEEVE
INSTALLATION
FOR CONCRETE
FLOOR**

**R NOZZLE
M SLEEVE
ACCESSORIES**


Remove UN protective cover only before nozzles installation

INSTALLATION INSTRUCTION

Place the Nozzles!
Screw the nozzles into the sleeves; all the nozzles must be leveled on the floor.

Remember the Gasket!
The soft gasket can be installed to increase the sealing of the Nozzle on the floor

4

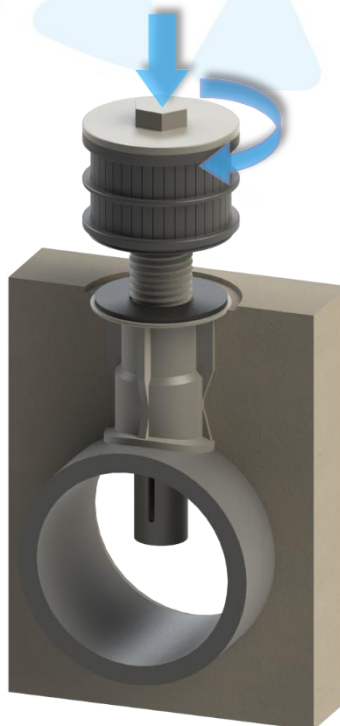

NOZZLE + SLEEVE INSTALLATION FOR CONCRETE FLOOR



R NOZZLE M SLEEVE ACCESSORIES

Tight the Nozzles!

Torque set 5-10Nm
Max screw speed 400rpm

Check the assembly!
The Nozzle should not move and join perfectly to the sleeve and the floor

5

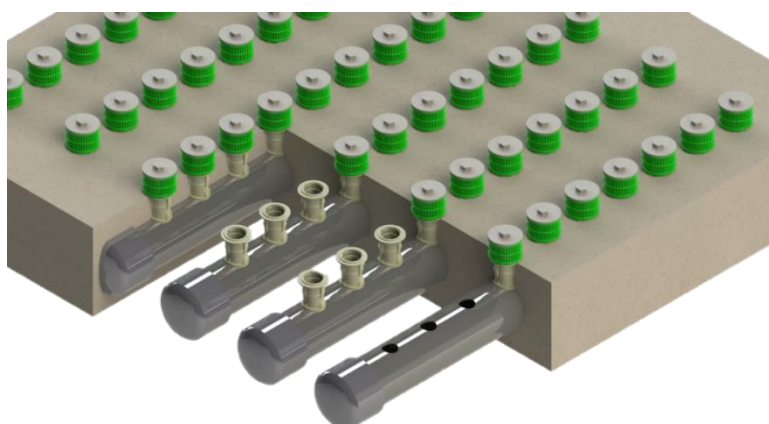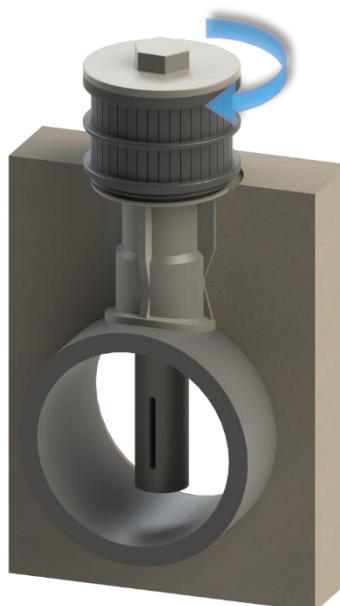

Check the floor!

All the nozzles must join perfectly to the floor and should be perfectly levelled in the whole floor. If any level adjustment is necessary you can use the OR rigid washer in different thickness to compensate any deviation

ISTRUZIONI DI INSTALLAZIONE

Posiziona il manicotto M sul tubo in PVC ed incollalo con il collante adeguato; noi suggeriamo colla tipo Tangit.

Verifica il foro del tubo!
Controlla il foro nel tubo
Ø31.5-32.0mm

1



Tappa il manicotto M con il tappo UN per proteggere il filetto femmina durante la gettata di cemento

Controlla l'assemblaggio!
Assicurati che il manicotto si fissato correttamente, allineato al tubo e agli altri manicotti

2



Getta il cemento del piano quando tutti i manicotti sono correttamente inseriti sui tubi di distribuzione

Controlla i manicotti!
Assicurati che tutti siano allineati al piano, livellati rispetto a tutti gli altri manicotti

3



**INSTALLAZIONE
UGELLO E
MANICOTTO
SU PIANI IN
CEMENTO**


**UGELLO R
MANICOTTO M
ACCESSORI**

Rimuovi i tappi protettivi UN solo prima del montaggio ugelli

Installa gli ugelli!
Avvita gli ugelli nei manicotti;
tutti gli ugelli devono essere
livellati sul pavimento

Ricorda la guarnizione!
La guarnizione morbida può
essere installata per assicurare
la tenuta degli ugelli sul piano

4

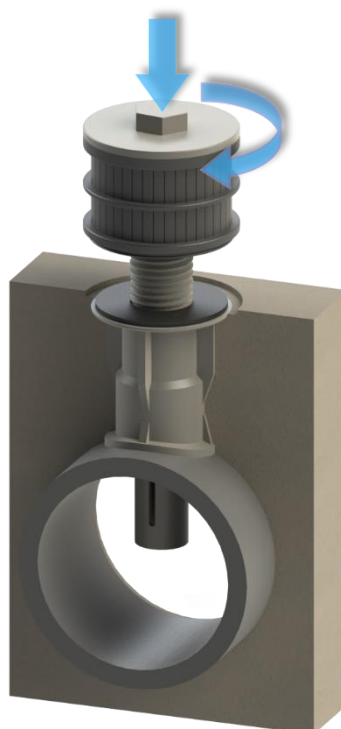


Stringi gli ugelli!

Set dinamometro 5-10Nm
Max avviteamento 200rpm


Controlla l'assemblaggio!
L'ugello non deve muoversi e
deve aderire perfettamente al
manicotto e al pavimento

5

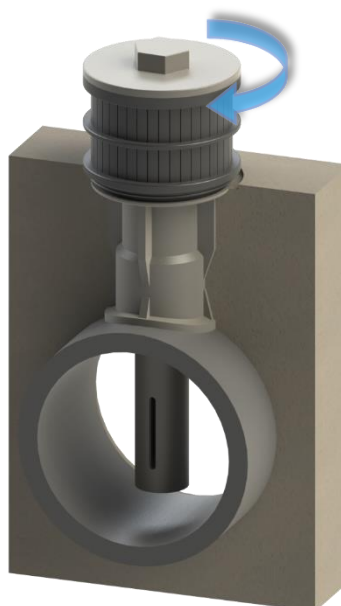

INSTALLAZIONE UGELLO E MANICOTTO SU PIANI IN CEMENTO

UGELLO R MANICOTTO M ACCESSORI

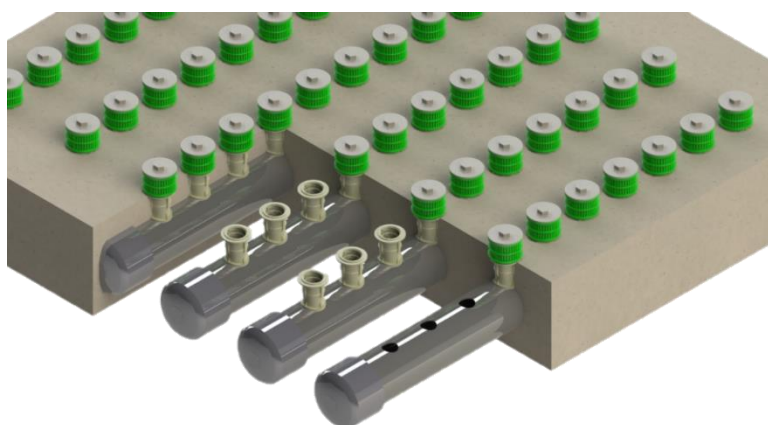

Controlla il pavimento!

Tutti gli ugelli devono aderire perfettamente al piano e
devono essere adeguatamente livellati su tutto il filtro.
Se si rende necessaria una correzione puoi usare le
rondelle rigide OR di diverso spessore per compensare
ogni differenza di altezza.